



**ELIXIR**  
**INDUSTRIES**  
SINCE 1948

---

---

How to Effectively Measure

Elixir

Exterior Door Cores

and

Storm Doors

[www.elixirind.com](http://www.elixirind.com)  
[www.elixir24.com](http://www.elixir24.com)



## Elixir Door Core Measurements


<b>1-3/8" Regular Outswing Doors (200, 300 &amp; 400 Series)</b>				
Call Size	Actual Pan Width Measurement	Actual Pan Length Measurement	Actual Lid Width Measurement	Actual Lid Length Measurement
32 x 72	30-3/4"	70-3/4"	32"	72"
32 x 74	30-3/4"	72-3/4"	32"	74"
32 x 76	30-3/4"	74-3/4"	32"	76"
32 x 78	30-3/4"	76-3/4"	32"	78"
32 x 80	30-3/4"	78-3/4"	32"	80"
34 x 72	32-3/4"	70-3/4"	34"	72"
34 x 74	32-3/4"	72-3/4"	34"	74"
34 x 76	32-3/4"	74-3/4"	34"	76"
34 x 78	32-3/4"	76-3/4"	34"	78"
34 x 80	32-3/4"	78-3/4"	34"	80"
36 x 72	34-3/4"	70-3/4"	36"	72"
36 x 76	34-3/4"	74-3/4"	36"	76"
36 x 78	34-3/4"	76-3/4"	36"	78"
36 x 80	34-3/4"	78-3/4"	36"	80"

<b>1-3/8" Regular Outswing Doors (200 Series)</b>				
Call Size	Actual Pan Width Measurement	Actual Pan Length Measurement	Actual Lid Width Measurement	Actual Lid Length Measurement
42 x 72	40-3/4"	70-3/4"	42"	72"
42 x 76	40-3/4"	74-3/4"	42"	76"
42 x 78	40-3/4"	76-3/4"	42"	78"
42 x 80	40-3/4"	78-3/4"	42"	80"
46-1/2 x 75	44-3/4"	73-3/4"	46-1/2"	75"
46-1/2 x 76	44-3/4"	74-3/4"	46-1/2"	76"
48 x 72	46-3/4"	70-3/4"	48"	72"
48 x 76	46-3/4"	74-3/4"	48"	76"
48 x 78	46-3/4"	76-3/4"	48"	78"
48 x 80	46-3/4"	78-3/4"	48"	80"

<b>1-3/8" Regular Outswing Double Doors (200, 300 &amp; 400 Series)</b>				
Call Size	Actual Pan Width Measurement of ea. Core	Actual Pan Length Measurement of ea. Core	Actual Lid Width Measurement of Both Cores	Actual Lid Length Measurement of ea. Core
61 x 72	28-3/4"	70-3/4"	61"	72"
61 x 75	28-3/4"	73-3/4"	61"	75"
70-1/2 x 75	33-1/2"	73-3/4"	70-1/2"	75"
72 x 72	34-1/4"	70-3/4"	72"	72"
72 x 76	34-1/4"	74-3/4"	72"	76"
72 x 80	34-1/4"	78-3/4"	72"	80"
73 x 72	34-3/4"	70-3/4"	73"	72"
73 x 76	34-3/4"	74-3/4"	73"	76"
73 x 80	34-3/4"	78-3/4"	73"	80"



**1-3/8" Regular & Housetype Door Core Measurements  
(200, 300, 400, 6000, 8000 and 9000 Series)**

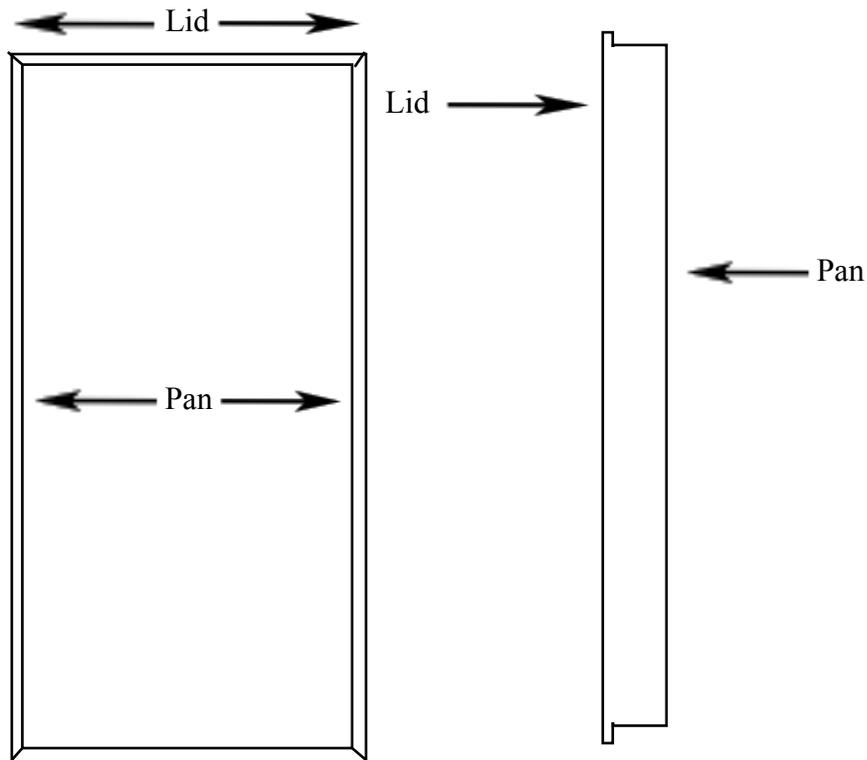


**NOTE:** For regular doors, the lid will be on the outside of the home and the pan will be on the inside (200, 300 & 400 Series). These doors will have aluminum frames.


For housetype doors (6000, 8000 and 9000 Series), the lid will be on the inside of the home and the pan will be on the outside. The housetype door will have a storm door & the pan faces toward the storm door. These doors will have wood jambs.



1-3/8" Outswing Double Door Core Lid Measurements  
(200, 300 & 400 Series)

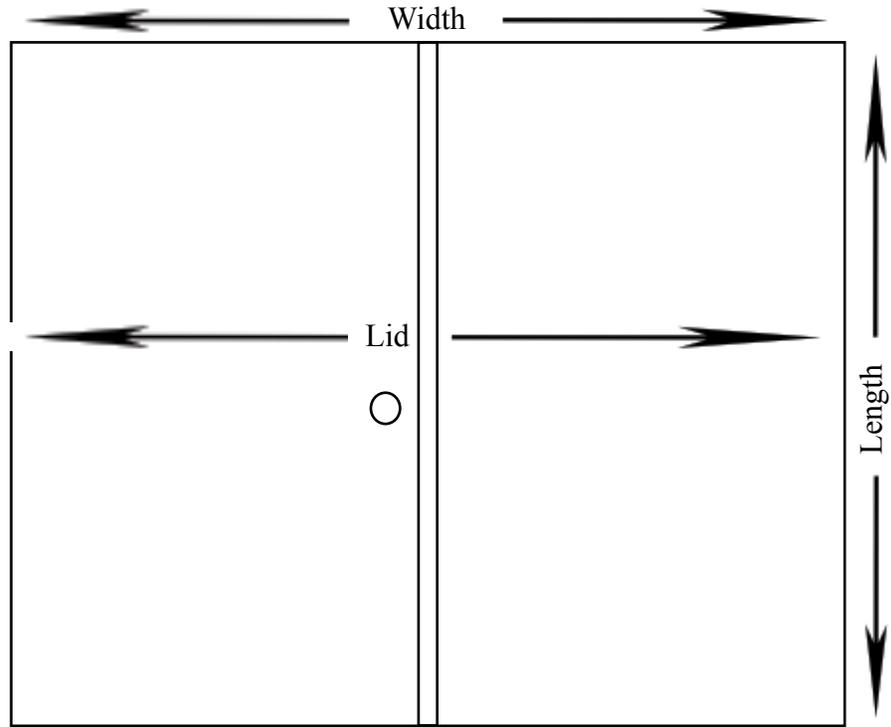

1-3/8" Outswing Double Door Core Pan Measurements  
(200, 300 & 400 Series)

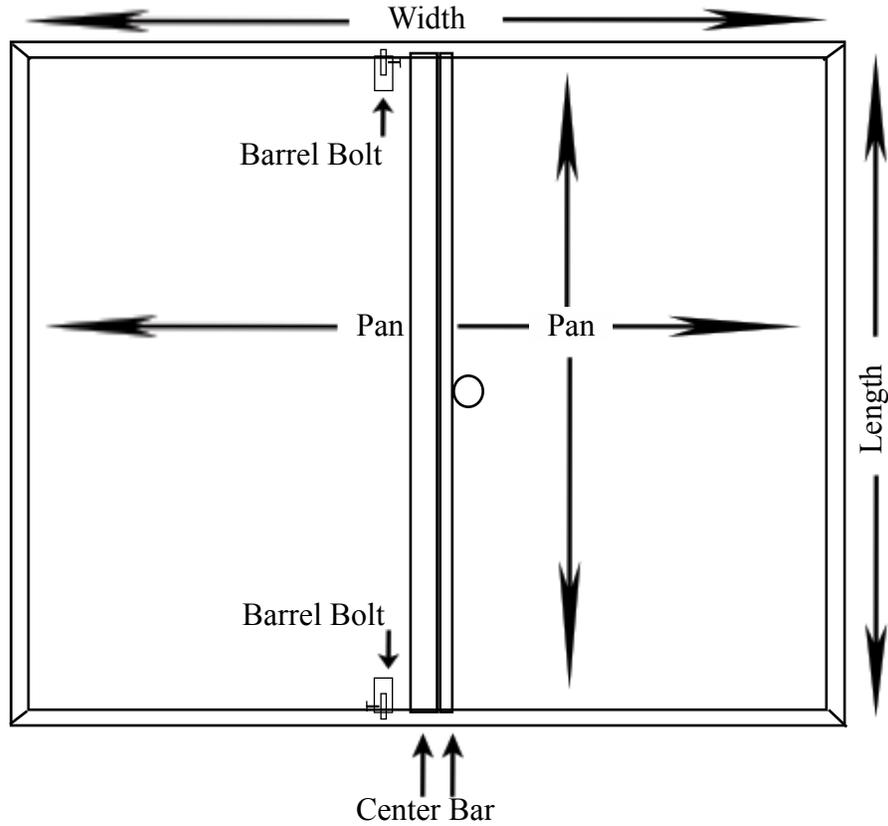



<b>1-3/8" Housetype Inswing Doors w/ Storms (6000, 8000, &amp; 9000 Series)</b>						
<b>Call Size</b>	<b>Actual Pan Width Measurement</b>	<b>Actual Pan Length Measurement</b>	<b>Actual Lid Width Measurement</b>	<b>Actual Lid Length Measurement</b>	<b>Actual Storm Core Width Measurement</b>	<b>Actual Storm Core Length Measurement</b>
32 x 72	29-7/8"	69-1/2"	31-1/8"	70-3/4"	30-1/16"	71"
32 x 74	29-7/8"	71-1/2"	31-1/8"	72-3/4"	30-1/16"	73"
32 x 76	29-7/8"	73-1/2"	31-1/8"	74-3/4"	30-1/16"	75"
32 x 78	29-7/8"	75-1/2"	31-1/8"	76-3/4"	30-1/16"	77"
32 x 80	29-7/8"	77-1/2"	31-1/8"	78-3/4"	30-1/16"	79"
34 x 72	31-7/8"	69-1/2"	33-1/8"	70-3/4"	32-1/16"	71"
34 x 74	31-7/8"	71-1/2"	33-1/8"	72-3/4"	32-1/16"	73"
34 x 76	31-7/8"	73-1/2"	33-1/8"	74-3/4"	32-1/16"	75"
34 x 78	31-7/8"	75-1/2"	33-1/8"	76-3/4"	32-1/16"	77"
34 x 80	31-7/8"	77-1/2"	33-1/8"	78-3/4"	32-1/16"	79"
36 x 76	33-7/8"	73-1/2"	35-1/8"	74-3/4"	34-1/16"	75"
36 x 78	33-7/8"	75-1/2"	35-1/8"	76-3/4"	34-1/16"	77"
36 x 80	33-7/8"	77-1/2"	35-1/8"	78-3/4"	34-1/16"	79"
38 x 76	35-1/2"	73-1/2"	36-3/4"	74-3/4"	35-5/8"	75"
38 x 78	35-1/2"	75-1/2"	36-3/4"	76-3/4"	35-5/8"	77"
38 x 80	35-1/2"	77-1/2"	36-3/4"	78-3/4"	35-5/8"	79"
38 x 82	35-1/2"	79-1/4"	36-3/4"	80-1/2"	35-5/8"	81"


<b>1-3/4" STR Doors w/ Storms (7000 Series)</b>				
<b>Call Size</b>	<b>Actual STR Core Width Measurement</b>	<b>Actual STR Core Length Measurement</b>	<b>Actual Storm Core Width Measurement</b>	<b>Actual Storm Core Length Measurement</b>
34 x 76	32-1/8"	73-1/2"	32-1/16"	75"
34 x 78	32-1/8"	75-1/2"	32-1/16"	77"
34 x 80	32-1/8"	77-1/2"	32-1/16"	79"
34 x 82	32-1/8"	79-1/4"	32-1/16"	81"
36 x 76	34-1/8"	73-1/2"	34-1/16"	75"
36 x 80	34-1/8"	77-1/2"	34-1/16"	79"
38 x 76	35-3/4"	73-1/2"	35-5/8"	75"
38 x 80	35-3/4"	77-1/2"	35-5/8"	79"
38 x 82	35-3/4"	79-1/4"	35-5/8"	81"



# ELIXIR INDUSTRIES

SINCE 1948

## 1-3/4" STR Door Core Measurements (7000 Series)

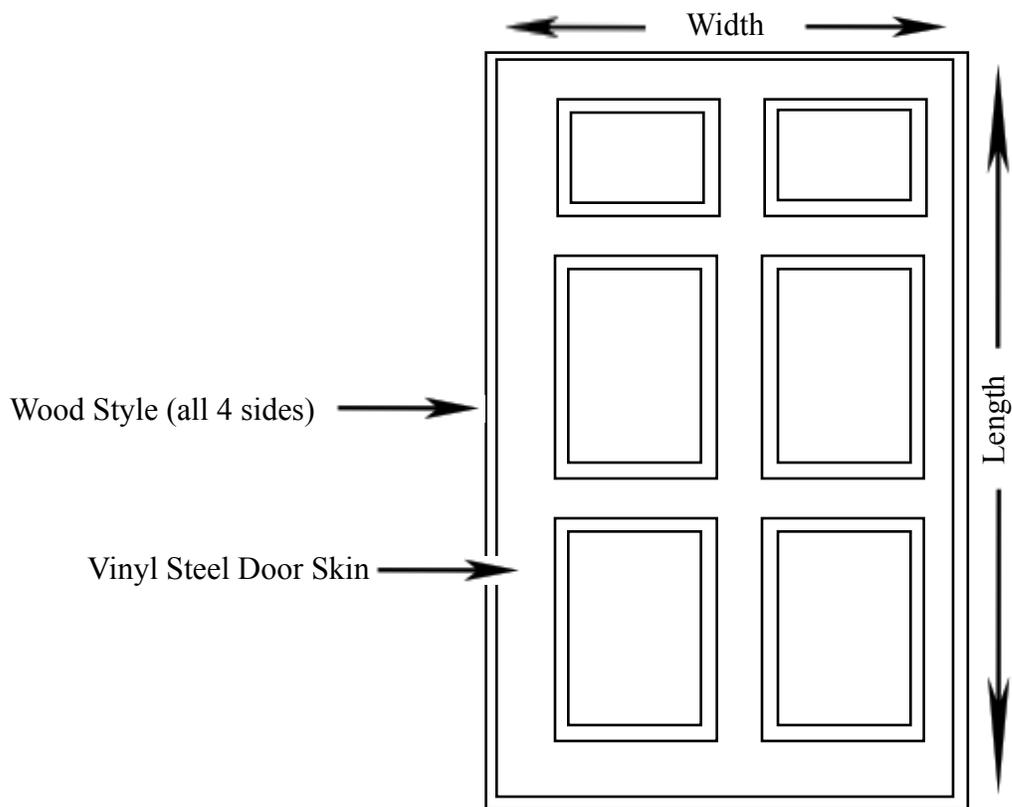

**NOTE: The 7000 Series STR door does not have a folded lip. These doors are flush with the edge of the jamb boards when they are closed.**



**ELIXIR**  
**INDUSTRIES**  
SINCE 1948

**Storm Door Core Measurements**  
**(6000, 7000, 8000 & 9000 Series)**

